







1 What's Inside the Box

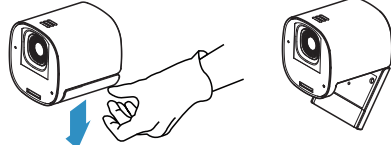
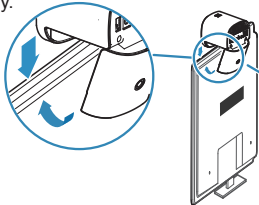
 TE10	 Power adapter
 Remote control and 2 x AAA batteries	 HDMI cable Provides two male connectors, one connecting to a display and the other to the HDMI port on the TE10.
 Product Certificate, Safety Precautions, and Warranty Card	 Quick Installation Guide
<p>Q You can use the power adapter only with this TE10. The preceding images are for your reference only. Actual components may differ in appearance. If any component is damaged, missing, or wet upon opening the box, contact local suppliers.</p>	

2 Installing the TE10

Select an installation method based on your site requirements.


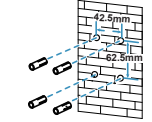
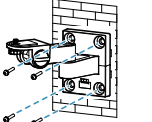
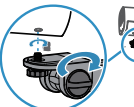 
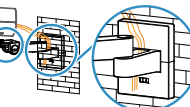 
Display Thickness	Installation Method
≤ 60 mm	Mounted on top of a display
> 60 mm	Mounted on a wall or tripod

Mounted on Top of a Display

- 1 Open foldable bracket.

- 2 Secure the TE10 on top of the display.

Ensure that foldable bracket and the back of the display are tightly positioned against each other.

Mounted on a Wall

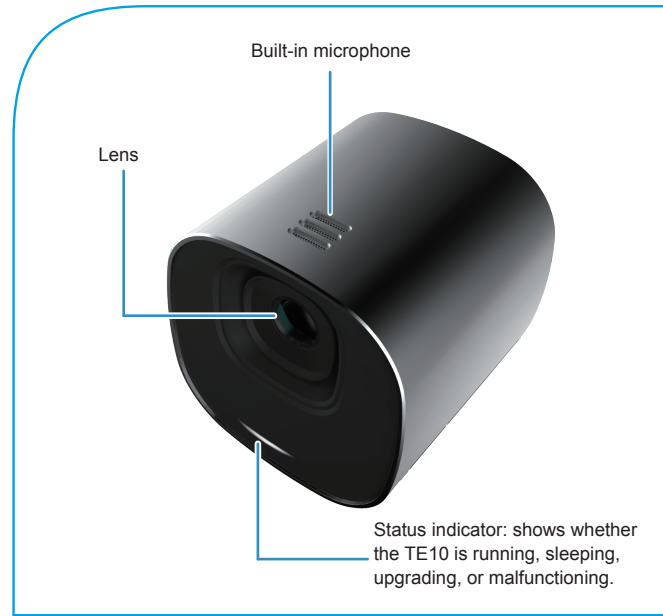
Use the bracket and its accessories to mount the TE10 on a wall. You will need a hammer drill, a hammer, a rechargeable battery-powered electric screwdriver, and a Phillips screwdriver.

- 1 Remove the screw covers from the bracket.

- 2 Put the bracket on the wall to specify the positions of the screw holes you will drill. Then insert the four expansion bolts into the holes.

Q Each hole must be 8 mm (0.31 in.) in diameter and 35 mm (1.38 in.) in depth.
- 3 Secure the bracket using four M6 x 30 cross recessed pan head screws with washers.

Q Put the screw covers back.
- 4 Secure the TE10 onto the base.

- 5 Connect and bind cables. (Actual cable colors may differ from that in this image.)

Q Adjust the TE10 to your desired angle and fasten the wheel screw.

Mounted on a Tripod

Purchase a tripod that can bear a weight of at least 3kg (6.61 lb). The sizes and positions of its holes must be the same as those of the holes at the bottom of the TE10.

3 Understanding the TE10



Configuration Guide



Quick Operation Guide

Huawei Technologies Co., Ltd.
Huawei Industrial Base, Bantian, Longgang,
Shenzhen 518129, People's Republic of China
<http://e.huawei.com>
Hotline: 400-822-9999

Version: V500R003C20
Date: 2016-09-05
Part number: 31507746
Issue: 01

3 Understanding the TE10

Built-in speaker: delivers audio of remote sites.

Q The built-in speaker works best in scenarios where participants are within 3 meters. For larger rooms, a professional-level microphone would likely be a better choice.

Q Use the tip of a pen (or similar) to press and hold the reset button.

RST: reset button (pin hole)

- Restore your TE10 to the pre-installed system version. (Press and hold this button for 3s when your TE10 is powering on.)
- Restore your TE10 to the factory settings. (Press and hold this button for 10s when your TE10 is running.)

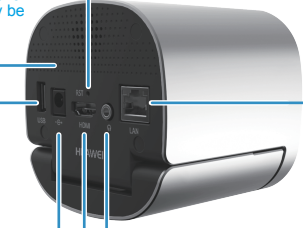
USB port: connects to a USB device.

Power port: connects to a power supply.

LAN port: Ethernet port

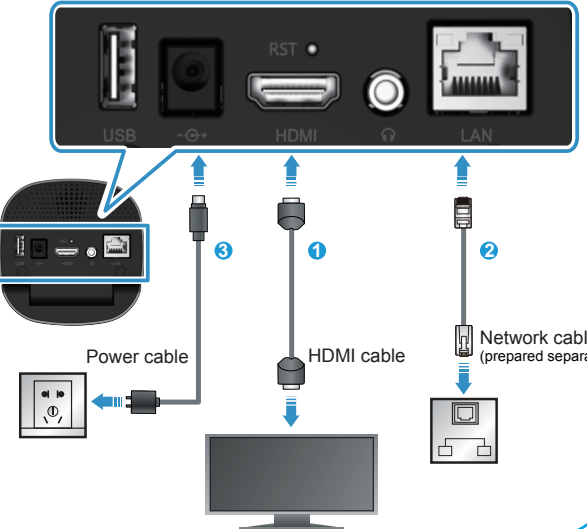
LINE OUT port: 3.5 mm audio output port

HDMI OUT port: connects to a TV set or a display for delivering video and presentation of the local site.



4 Connecting Cables

The following figure shows the recommended TE10 cable connections.




1. Power cable

2. Network cable (prepared separately)

3. HDMI cable

5 Powering On the TE10

When all cables are connected correctly, connect the TE10 to a power supply. Then the TE10 automatically powers on.




The following table describes the TE10 indicator status.

The Indicator Is...	The TE10 Is...
Off	Powered off.
Blinking white twice per second	Powering on.
Blinking white four times per second	Being upgraded.
Steady white	Working properly.
Blinking once	Responding to the press on a button on the remote control.
Blinking once per second	Responding to the press and hold on a button on the remote control.
Blinking white (on for 1s, off for 2s)	Standby.
Steady red	Encountering a hardware fault.
Steady orange	Encountering a software fault.
Blinking orange twice per second	Overheated.


6 Configuring the TE10

After powering on the TE10 for the first time, pair it with a remote control by simultaneously pressing and holding the and buttons for 5s.



After setting the language, configure the TE10 by following the instructions under **Endpoint Settings > Settings Parameters on the Remote Control UI > Setting Parameters Using the Wizard** in the *TE10 Videoconferencing Endpoint V500R003C20 Configuration Guide*. You can scan the QR code on the back cover of this guide to view the TE10 configuration guide and quick operation guide.

Q To share presentation from your computer, install the AirPresence client on it first. Open a web browser, enter the IP address of your device in the address box, and press Enter. Click **Download AirPresence Client** at the bottom. Then follow the onscreen instructions to install the client.



Q For other relevant guides, visit <http://support.huawei.com/enterprise/> and search **TE10 V500R003C20**. For any unresolved issues, contact Huawei technical support engineers.

TE10 Videoconferencing Endpoint Quick Installation Guide

